 


Operating Instructions . . . LEA90AW

Models LEA90AL, LEA90AW, LGA90AL, and LGA90AW

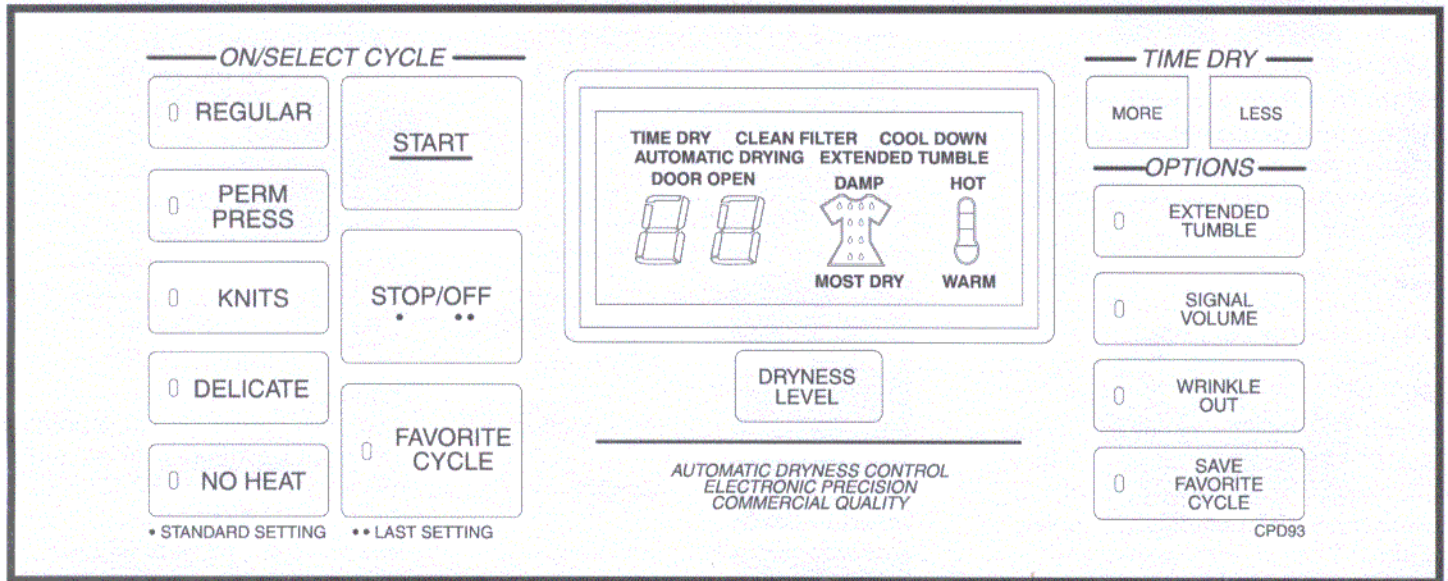

WARNING

To reduce the risk of fire, electric shock, serious injury or death to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** in your Use and Care Guide before operating the dryer.

W128

Available Drying Cycles

Regular

Use this cycle to dry large and average size loads. The load should be made up of the same type of fabric to ensure that all items will dry in the same length of time. The cool down period at the end of the cycle tumbles the load with no heat to help prevent wrinkling.

Perm Press

Use this cycle for permanent press, polyester, and other synthetics that are "no-iron." The cool down period at the end of the cycle tumbles the load with no heat to help prevent wrinkling. Immediately remove the load to minimize items from wrinkling when sitting in the dryer.

Knits

Use this cycle for knit items that should be dried with medium heat. The cool down period at the end of the cycle tumbles the load with no heat to help prevent wrinkles.

Delicate

Use this cycle to dry delicate items and those items which must be dried with low heat. The cool down period at the end of the cycle tumbles the load with no heat to help prevent wrinkles.

No Heat

Use this cycle for items that should be dried with no heat. Use also for fluffing rugs, bedspreads, pillows, blankets and other items.

Favorite Cycle

Use this pad to select your favorite cycle if one has been previously saved in memory. The control gives you the ability to save a dryness level, time and any allowed options.

To Dry Clothes

IMPORTANT: See the **INSTALLATION INSTRUCTIONS** before using dryer.

 
IMPORTANT: Before using dryer for the first time, use an all purpose cleaner or a detergent and water solution and a damp cloth to remove shipping dust from inside dryer drum.

- Sort items into separate loads.




D305IE0A

- Clean lint filter before each use.

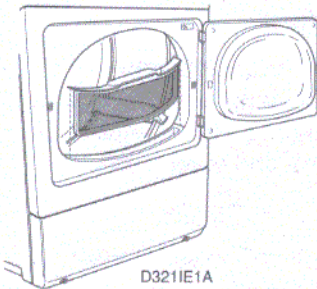


D321IE1A

 - Add clothes loosely into dryer drum. Add fabric softener sheet, if desired.

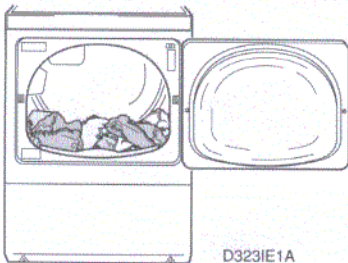


D323IE1A

 - Close loading door. Dryer will not operate with the door open.

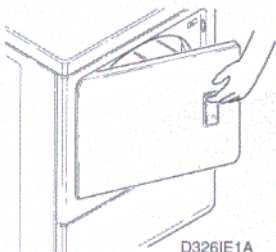

D326IE1A

 - Press one of the **SELECT CYCLE** pads to select a cycle which is appropriate for the type of fabric being dried. Choose from **REGULAR**, **PERM PRESS**, **KNITS**, **DELICATE**, or **NO HEAT**. Pressing a **SELECT CYCLE** pad once will display the preset factory settings. Pressing the pad a second time will display the last setting used.

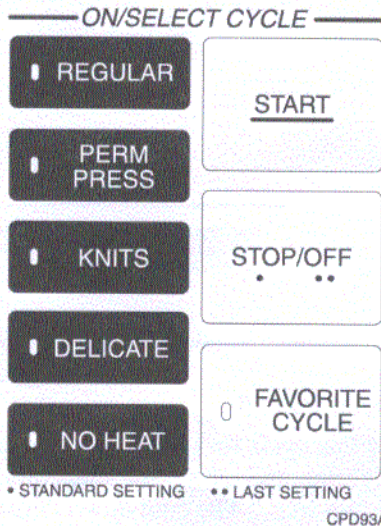

These cycles automatically set the drying time, dryness level, and heat temperature, but they may also be programmed to hold a custom cycle (see **SAVE FAVORITE CYCLE**). A light to the left of the pad lights up to show that the cycle has been selected.

Pressing the **REGULAR**, **PERM PRESS**, **KNITS** or **DELICATE** pad will activate the light on the pad, light the rain drop levels of the **DRESS** symbol, and light the bars of the **THERMOMETER** symbol. The word **AUTO-MATIC** will light, the words **CLEAN FILTER** will flash, and "AU" will appear in the two digit display.

Pressing the **NO HEAT** pad will activate the light on the pad and the digit display will indicate 20 minutes.

- Once the dryer door is closed, press **START** to start the drying cycle. In the **REGULAR**, **PERM PRESS**, **KNITS** or **DELICATE** cycles, the display will indicate "AU," the words **CLEAN FILTER** will turn off, and the word **DRYING** will light up. Fifteen seconds after the **START** pad is pressed the wording (**DAMP**, **MOST DRY**, **HOT**, and **WARM**) in the display will turn off. When you touch any pad during the cycle, these words will once again light up for another 15 seconds. The word **DRYING** will remain on until the start of the cool down cycle, at which point the word **DRYING** goes off and the words **COOL DOWN** come on. In the **NO HEAT** cycle, the words **COOL DOWN** will light up.

 


In **COOL DOWN**, the two digit display will show a number indicating the cool down time. It will count down by one minute intervals until it reaches zero. At this time, the entire cycle is complete if the extended tumble has not been selected.

TO STOP THE DRYER AT ANY TIME, open the loading door or press the **STOP** pad once.


TO RESTART THE DRYER, close the loading door and press the **START** pad. The dryer will not operate if the loading door is open.

Stop/off

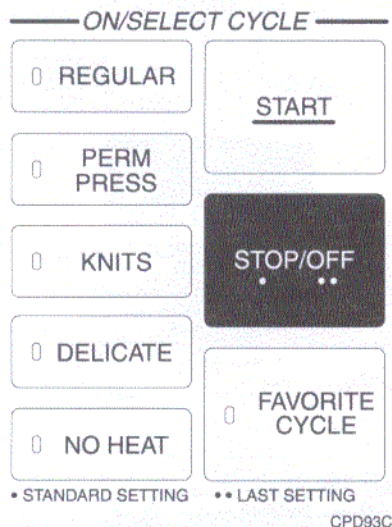


Pressing the STOP/OFF pad once stops an active cycle (the digits area of the display will begin to flash). Pressing the STOP/OFF pad twice within three seconds resets the control completely.

 Dryness Level

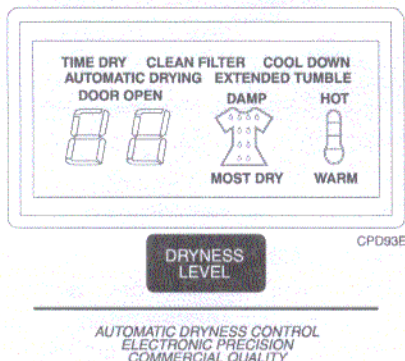


This feature allows you to adjust the dryness level for the currently selected automatic cycle. The preset factory setting for all cycles is the 3rd level on the dress symbol. Each touch of the DRYNESS LEVEL pad will increase the dryness level on the dress symbol until the Most Dry level (first level of raindrops on dress symbol) has been reached. Pressing DRYNESS LEVEL again will return the level to the Damp level (fourth level of raindrops on dress symbol). The dryness level may be changed any time during the first automatic heating cycle.

 DAMP

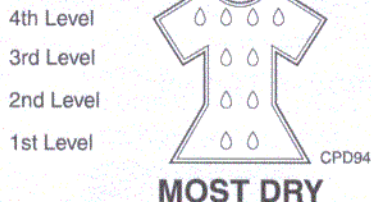


The more rain drop levels that are lighted, the more damp the clothes will be.

 Pressing the dryness level pad after a timed cycle has been selected will cause the control to exit the time dry setting and re-enter the automatic setting.

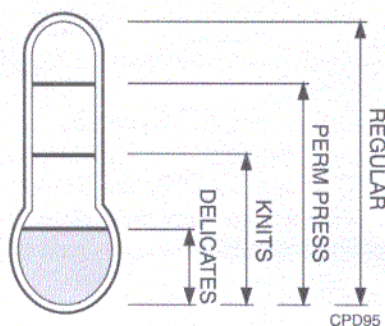

The thermometer symbol shows the temperature level of the air for the current cycle. The temperature levels have been preset at the factory specifically for the types of clothes to be dried for each cycle. The THERMOMETER symbol will light four bars for the REGULAR cycle, three bars for the PERM PRESS cycle, two bars for the KNITS cycle, and one bar for the DELICATE cycle. It will not light up for the NO HEAT cycle.

 
Time Dry

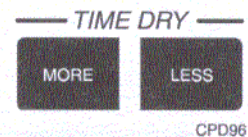

This feature allows you to manually set the drying time for a load. Enter the time dry mode by pressing the MORE or LESS pad after you have selected a cycle and the "AU" is displayed in the two digit display. The word AUTOMATIC, the digits "AU," and the dress symbol will turn off. The word TIME DRY will light up and an amount of time in minutes will light up in place of "AU." Each touch of the MORE or LESS pad will change the amount of time displayed by one minute. Pressing and holding a MORE pad or LESS pad will change the one minute intervals more quickly. Press the MORE pad to add drying time to the cycle and press the LESS pad to take away drying time from the cycle. When you have finished changing the time, press the START pad. The dryer will start and the digit display will show the total drying and cool down time. These pads may also be used to change the drying time once the dryer has started. Drying time can only be reduced when the dryer is not in the cool down period. Once it is in cool down, the MORE and LESS pads are deactivated. These pads may not be used when an automatic drying cycle has been started.

Status Words

 Words will light up in the display to tell you what is happening inside the dryer.

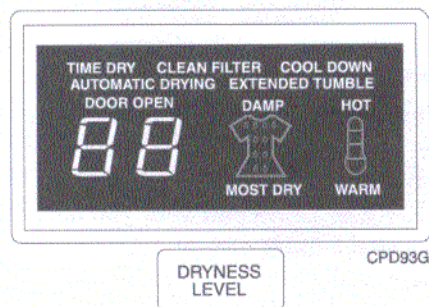

“AUTOMATIC”

Lights up when the current cycle is an automatic cycle.

“TIME DRY”

Lights up when the current cycle is a timed cycle set by the user.

“DRYING”

Lights up while heated air is being applied to the clothes. It does not light up in the NO HEAT cycle.

“COOL DOWN”

Lights up when the drying cycle is finished and the clothes are being cooled with room temperature air.

“EXTENDED TUMBLE”

Lights up after the clothes have been cooled down when this option is selected.

 
“CLEAN FILTER”

Lights up and flashes before the start of each cycle to remind you to clean the dryer's lint filter. A clean filter promotes faster drying and energy savings.

Options

There are four options available on your dryer.

Extended Tumble

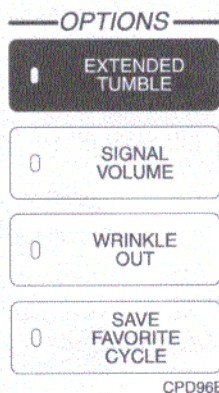


Use this 99 minute extended cool down cycle to provide items with a 30 second tumble every five minutes. This setting may be stopped by opening the dryer door or pressing the STOP pad. Pressing the STOP pad twice within three seconds will reset the control.

To use this option, press the EXTENDED TUMBLE pad after selecting the cycle and dryness level of the load. Once the cool down cycle is complete, the signal will sound (if selected), the digit display will indicate 99, the words EXTENDED TUMBLE will light and the cycle will begin. At the end of every 30 second tumble the signal will sound if selected. If the dryer door is opened during the EXTENDED TUMBLE, the digit display will turn on and off every second, the words DOOR OPEN will light, and the display will continue counting down time in one minute intervals. When the door is closed, the words DOOR OPEN, will go off. Press the START pad to restart the EXTENDED TUMBLE cycle, and the dryer will immediately tumble for 30 seconds. The EXTENDED TUMBLE feature may be selected any time before the end of the normal automatic or time dry cycles.

The EXTENDED TUMBLE option can not be selected while using the NO HEAT cycle.

 
Signal Volume

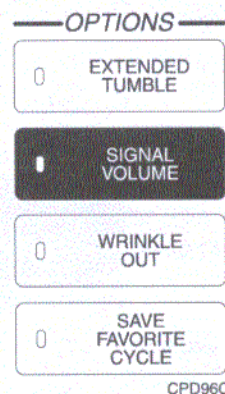

A signal is provided to let you know when the cycle is done. The signal has three distinctive volume levels. Pressing the SIGNAL VOLUME pad once will produce the softest tone. Press the pad again and the tone will get louder. Pressing the pad a third time will result in setting the loudest tone. To turn the signal off, press the pad one more time after you hear the loudest tone and the SIGNAL VOLUME light will go out. The signal will not sound if the SIGNAL VOLUME pad light is off.

The signal volume that was selected for the previous cycle will remain the same for following cycle selections until it is changed or turned off.

 
Wrinkle Out

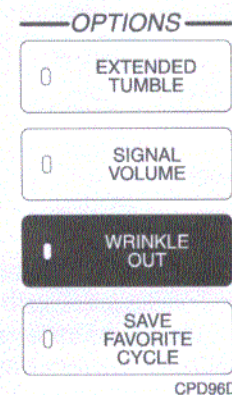

Pressing this pad, when using an automatic cycle, will provide garments with a short heat setting followed by a cool down. This option is useful for items that are slightly wrinkled after sitting in a dryer or a laundry basket overnight.

Save Favorite Cycle

 Pressing this pad will save the currently selected dryness level or time and options in the control memory as long as power is maintained.

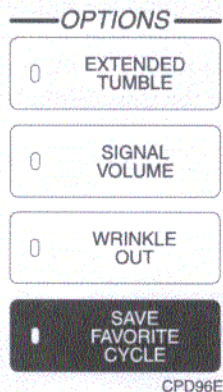

To save your favorite cycle, select a cycle and a dryness level with the options you desire. The timed cycles can be changed by using the MORE or LESS pads to increase or decrease the amount of drying time. When finished, press the SAVE FAVORITE CYCLE pad under OPTIONS. Your favorite cycle will remain in the control memory as long as power is maintained. Should the dryer be disconnected from its power source, your favorite cycle must be re-saved.

If no favorite cycle has been saved, the FAVORITE CYCLE pad will display the REGULAR cycle preset factory settings.

Error Signals

If an invalid selection is chosen, the two-digit display will indicate "Er" and the lowest volume signal will sound. The control will then display what was previously displayed before the invalid selection was made. Refer to the chart below for a listing of all the invalid options per cycle.

| Select Cycle Pad | Invalid Options |
|------------------|---|
| Regular | More and Less in automatic cycle |
| Perm Press | More and Less in automatic cycle |
| Delicate | More and Less in automatic cycle |
| Knit | More and Less in automatic cycle |
| No Heat | Extended Tumble, Dryness Level, Wrinkle out |

Contact your nearest Factory Authorized Service Center if any of the following error messages are displayed.

| Error Message | Type of Error | Description |
|---------------|------------------------|--|
| OP | Open Thermistor Error | Will be displayed if the dryer senses a temperature regulating error. A one second signal will sound and the dryer will turn off. Pressing a SELECT CYCLE pad will restart the dryer and turn off the signal, if the error has been corrected. |
| SH | Short Thermistor Error | Will be displayed if the dryer senses a temperature regulating error. A one second signal will sound and the dryer will turn off. Pressing a SELECT CYCLE pad will restart the dryer and turn off the signal, if the error has been corrected. |

Signal On Pad Depression

This feature turns the signal on at the lowest signal volume any time a pad is pressed. This feature is continuously active and can only be turned off by pressing the STOP/OFF and SIGNAL VOLUME pads at the same time while the display is completely off. Repeat this procedure to turn the pad signal back on.

Child Guard

This feature disables all pads and displays "LO" (lock out) in the two digit display. In this mode it is impossible for the machine to operate in any way. This feature can be activated by pressing the STOP/OFF pad and START pad at the same time while the display is completely off. Press the pads once again at the same time to cancel this feature.

Drying Rack

The drying rack is useful for items that require no-tumble drying, such as tennis shoes, sweaters, stuffed toys or other delicate items.

The rack can be installed by placing the rack pegs into the indents in the back of the dryer and placing the front of the rack onto the inner door frame. See the illustration below.

